




reflecta gmbh
 Junghansring 60
 72108 Rottenburg
 Germany

mail@reflecta.de
 www.reflecta.de

INSTALLATION MANUAL


LCD Wall Mount

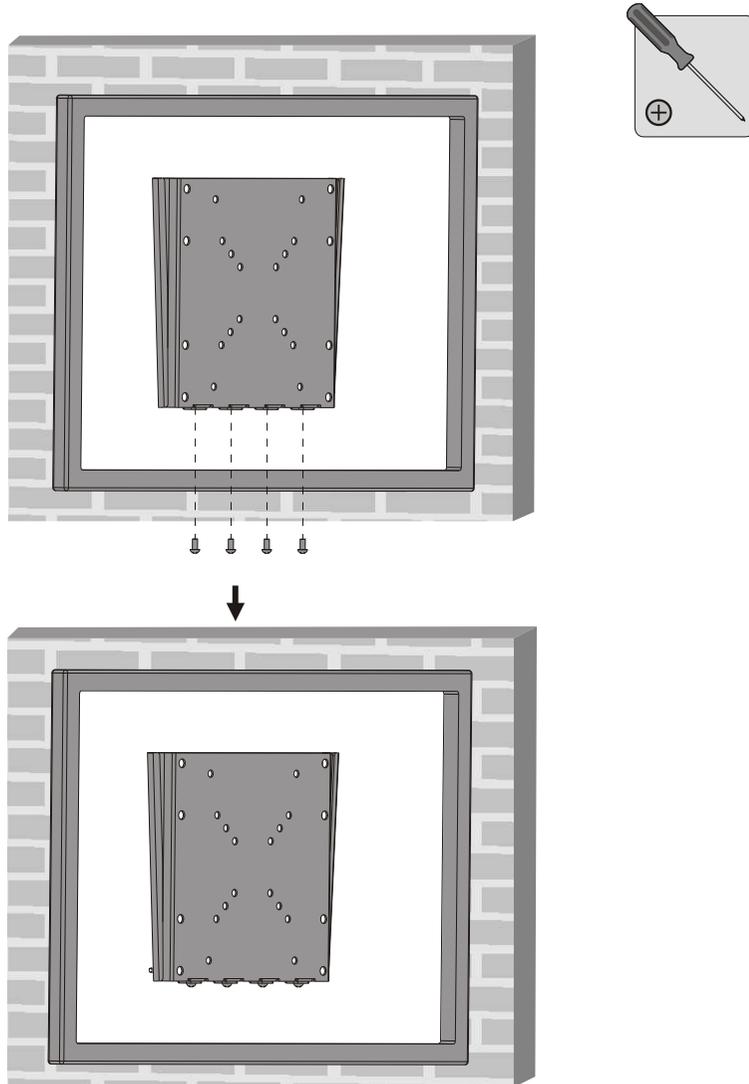

Secure your TV to the mount by tightening screws(as removed in step 1).

Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your dealer if you have any questions.

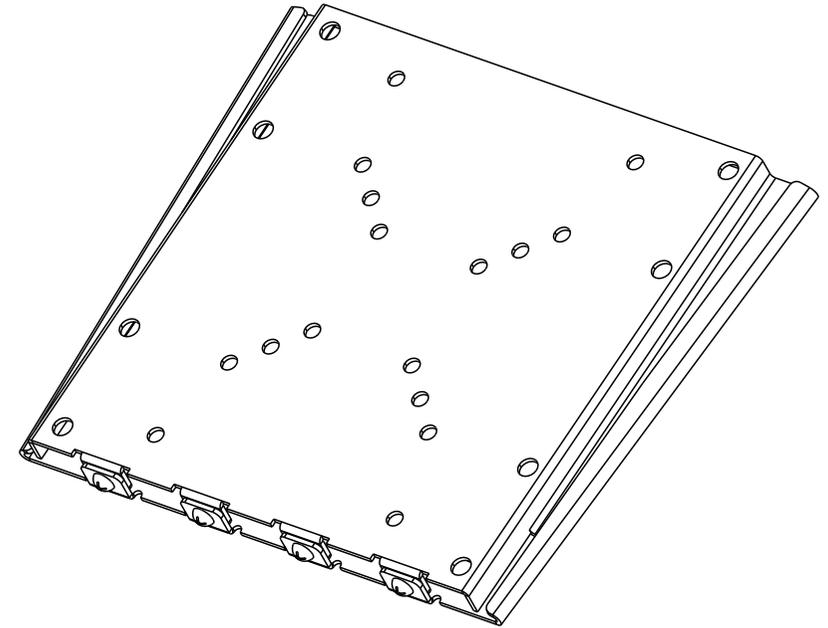

CAUTION: DO NOT EXCEED
 RATED LISTED WEIGHT. SERIOUS
 INJURY OR PROPERTY DAMAGE
 MAY OCCUR!

23079



50x50/75x75
 100x100/200x100
 200x200



42"
 MAX



30kg
 (66lbs)
 RATED

ISSUED: FEB. 2013


NOTE: Read the entire instruction manual before you start installation and assembly.

WARNING

- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

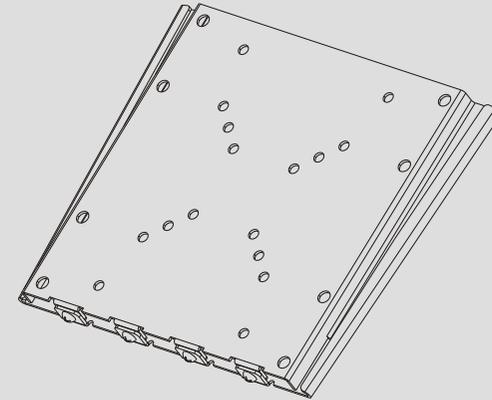

Package M



M4x14 (x4)
M-A



M5x14 (x4)
M-B



M6x14 (x4)
M-C



M8x20 (x4)
M-D



D5 washer (x4)
M-E



D8 washer (x4)
M-F



small spacer (x8)
M-G

Package W



ST6.3x55 (x4)
W-A




concrete anchor (x4)
W-B






D6 washer (x4)
W-C

1. Separating the VESA Plate

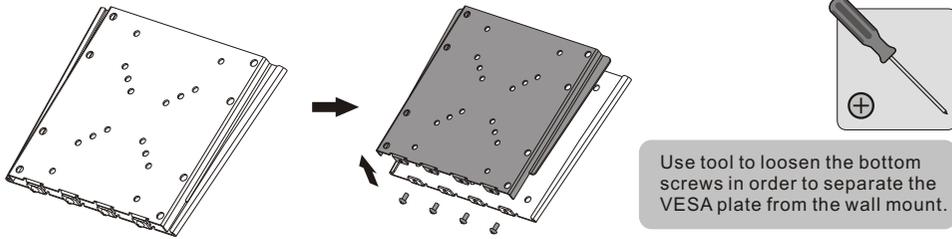


Use tool to loosen the bottom screws in order to separate the VESA plate from the wall mount.

   2a. For Wood Stud Wall Mounting



 
Find and mark the exact location of mounting holes



Drill pilot holes





Screw the wall plate onto the wall

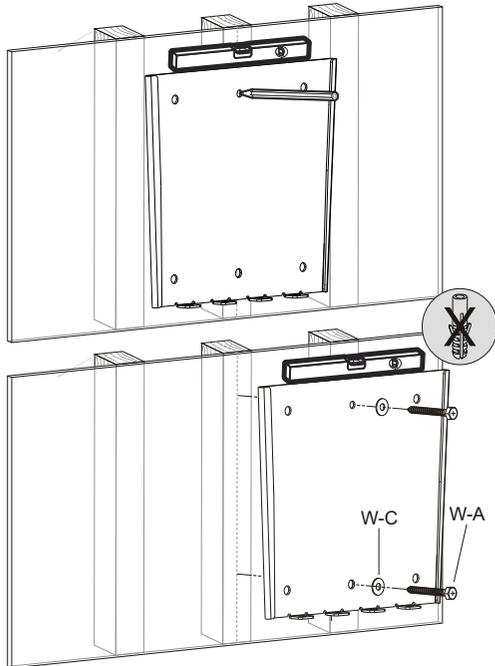


⚠ WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

  
2b. For Solid Brick and Concrete Mounting




 
Mark the exact location of mounting holes



Drill pilot holes

 


Screw the wall plate onto the wall

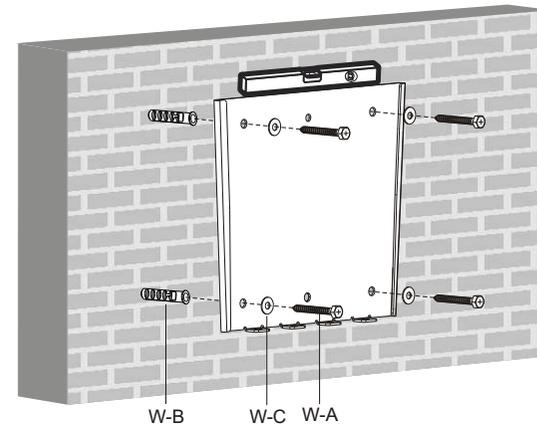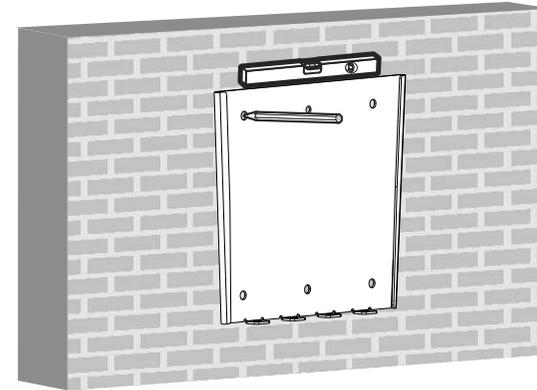

⚠ WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.


3. Installing the VESA Plate

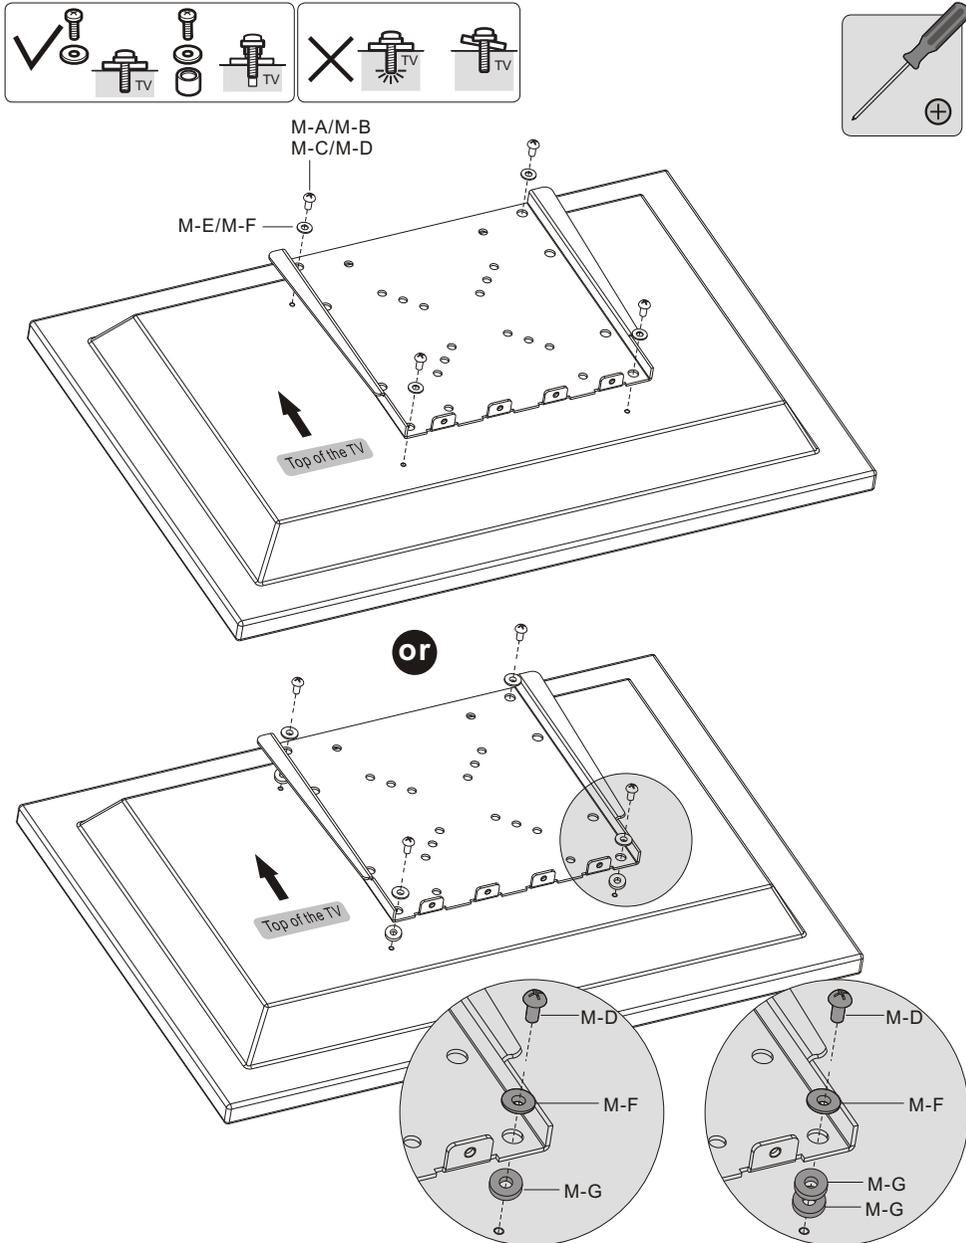

Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen. Screw the VESA plate onto the TV.

 **Tighten all screws but do not over tighten.**

4. Installing the TV

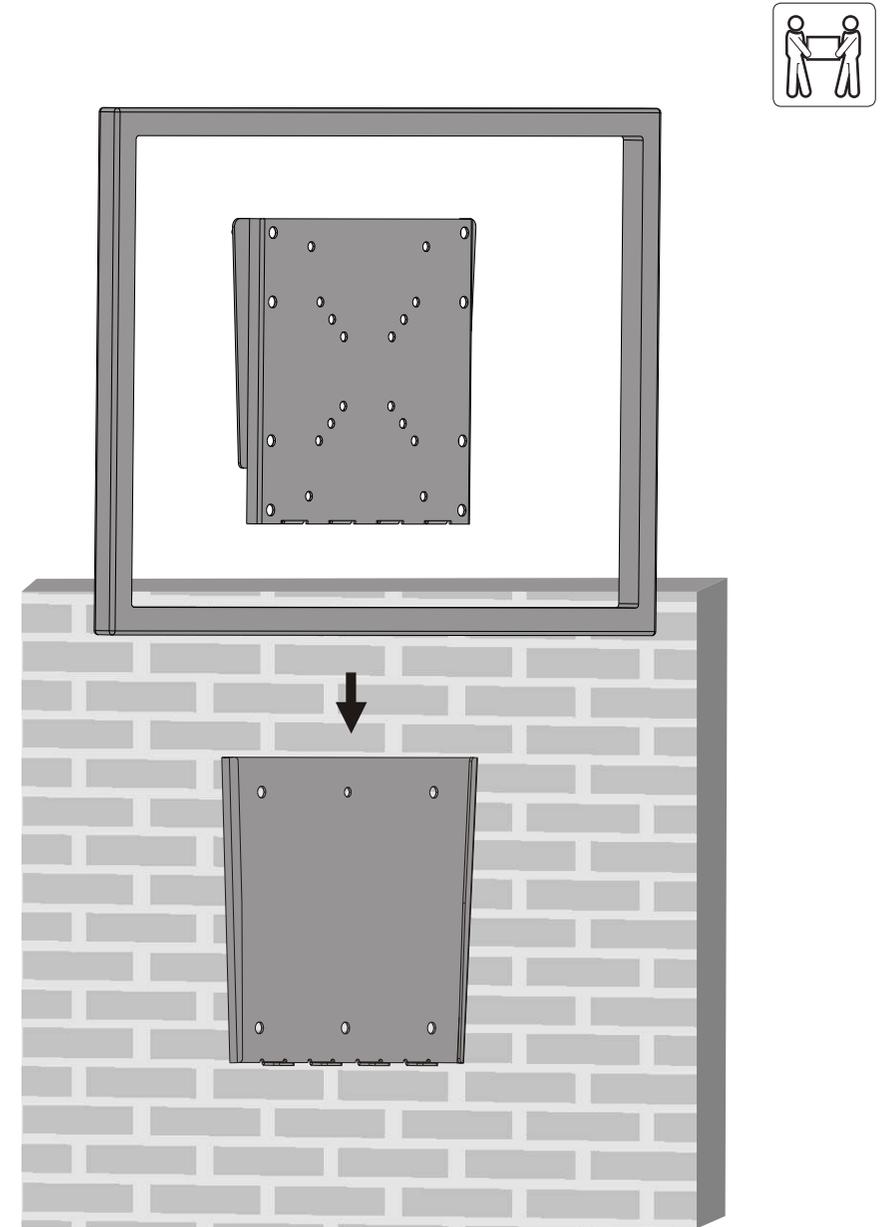

Lift the TV, aligning the holes in the VESA plate with the mount holes in the wall plate.